COOKTOP PARTS

For Models: RF386PXGW4, RF386PXGN4, RF386PXGQ4, RF386PXGZ4, RF386PXGB4, RF386PXGT4
(White) (Almond) (Designer White)(Designer Almond)(Black) (Biscuit)

30" ELECTRIC CERAN
FREESTANDING RANGE
SELF CLEAN OVEN

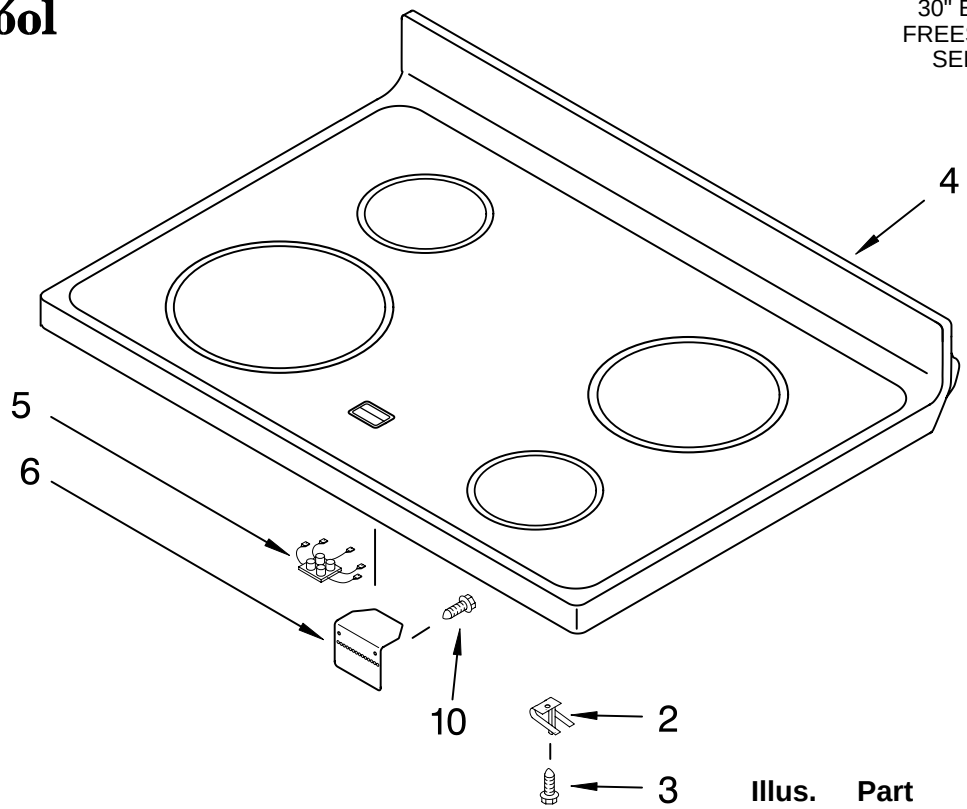

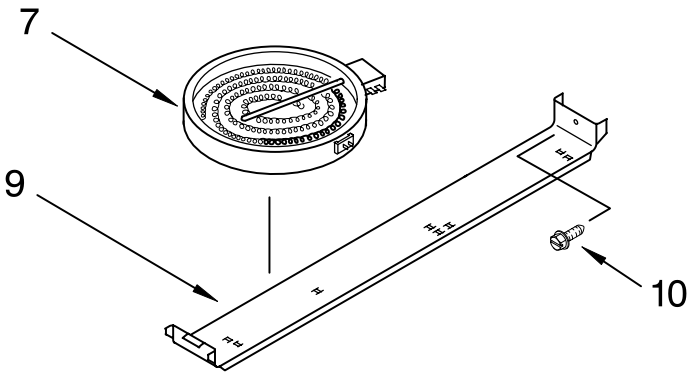

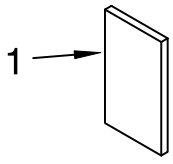

Literature Parts

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT8053714	Instructions, Installation
	LIT3195945	Installation Instr (Template)
	LIT8053401	Guide, Use & Care
	LIT8053302	Tech Sheet
	LIT3191638	Safer Cooking Tips
2	3149191	Spring, Locator
3	3196170	Screw
4		Cooktop
	8053541	White/Black Glass
	8053542	Almond/Black Glass
	8053543	White/White Glass
	8053544	Almond/Alm Glass
	8053545	Black/Black Glass
	8272513	Biscuit
5	8273334	Light, Indicator (Hot Surface)
6	3195810	Bracket, Ind Light
7		Element, Surface
	8272565	2500 W − LF
	8272567	1200 W − LR
	8272566	1800 W − RR
	8272567	1200 W − RF
9	3196455	Bracket, Element
10	3196169	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF386PXGW4, RF386PXGN4, RF386PXGQ4, RF386PXGZ4, RF386PXGB4, RF386PXGT4
(White) (Almond) (Designer White)(Designer Almond)(Black) (Biscuit)

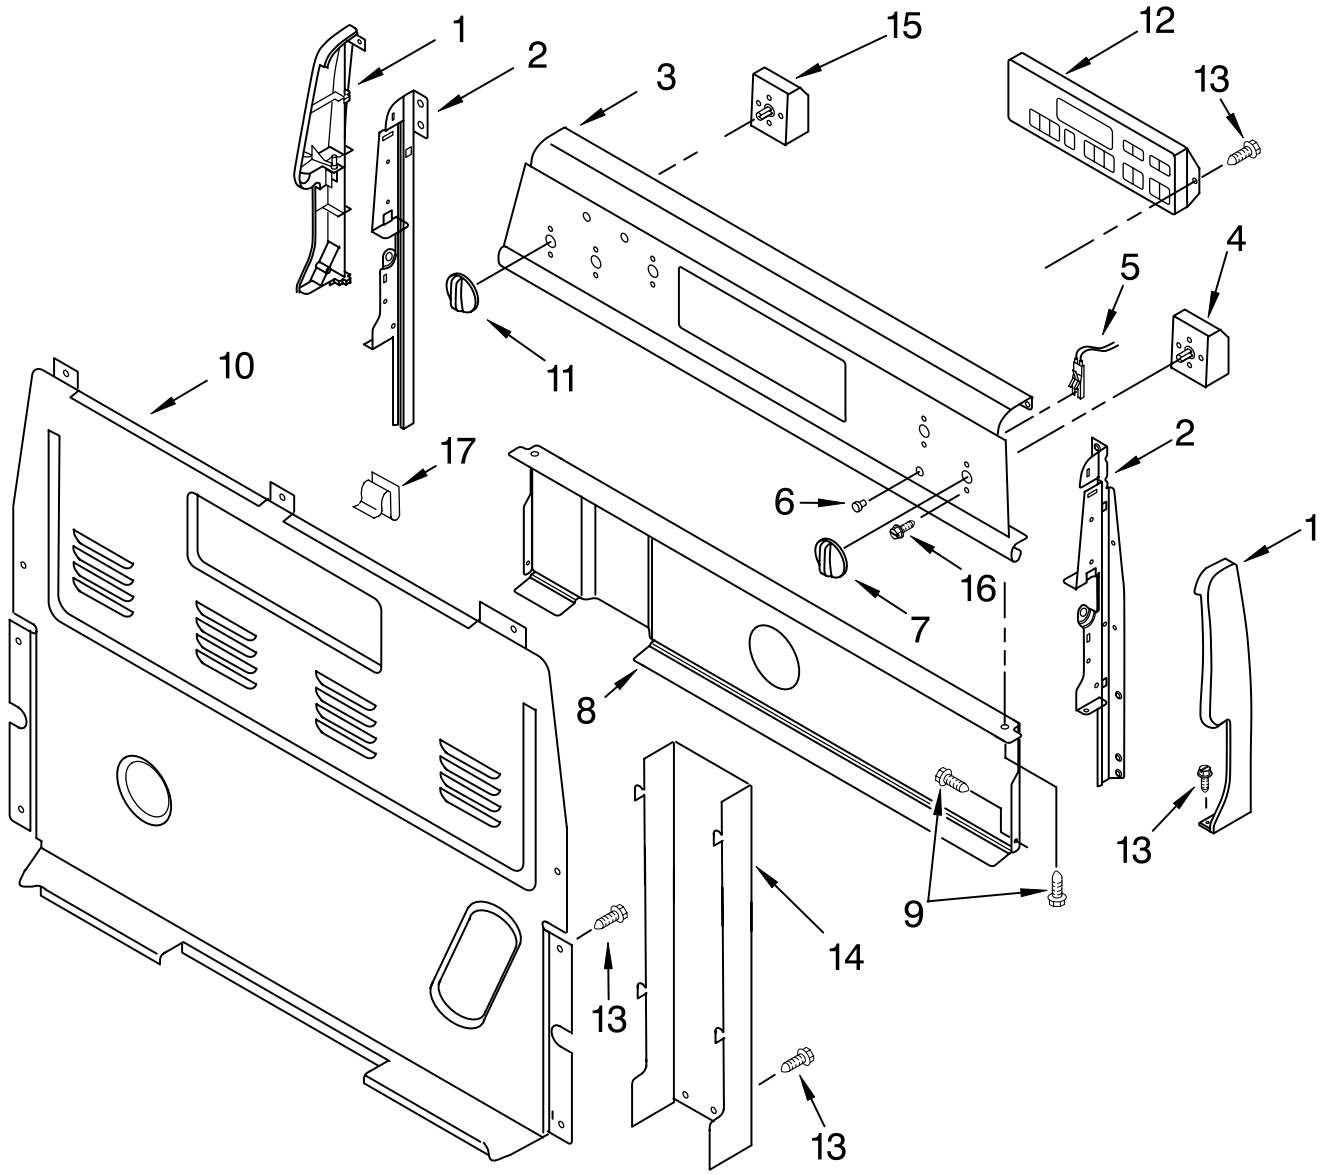

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	3186190	White Left Hand
	3186191	White Right Hand
	3186192	Almond Left Hand
	3186193	Almond Right Hand
	3186188	Black Left Hand
	3186189	Black Right Hand
	8272507	Biscuit Left Hand
	8272508	Biscuit Right Hand
2		Support, Endcap
	3186198	Left Hand
	3186199	Right Hand
3		Panel, Backguard
	8053500	White
	8053501	Almond
	8053499	Black
	8272509	Biscuit
4		Switch, Infinite
	3148954	Left Front
	3148951	Left Rear
	3148952	Right Rear
	3148951	Right Front
5		Light, Indicator
	8273301	Surface Unit (2)
	8273338	Accusimmer
6	3196068	Lens, Light (3)
7		Knob, Infinite (4)
	3196232	White
	3196233	Almond
	3196231	Black
	8272506	Biscuit
8	8053911	Shield, Heat
9	4449746	Screw
10	8272473	Cover, Upper
11		Knob, Accusimmer
	8053476	White
	8053477	Almond
	8053475	Black
	8272505	Biscuit
12		Control, Range
	6610180	White
	6610181	Almond
	6610179	Black
	6610289	Biscuit
13	3196178	Screw
14	3195133	Cover, Box
15	8053511	Switch, Accusimmer
16	3400882	Screw
17	8273564	Clip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF386PXGW4, RF386PXGN4, RF386PXGQ4, RF386PXGZ4, RF386PXGB4, RF386PXGT4
(White) (Almond) (Designer White)(Designer Almond)(Black) (Biscuit)

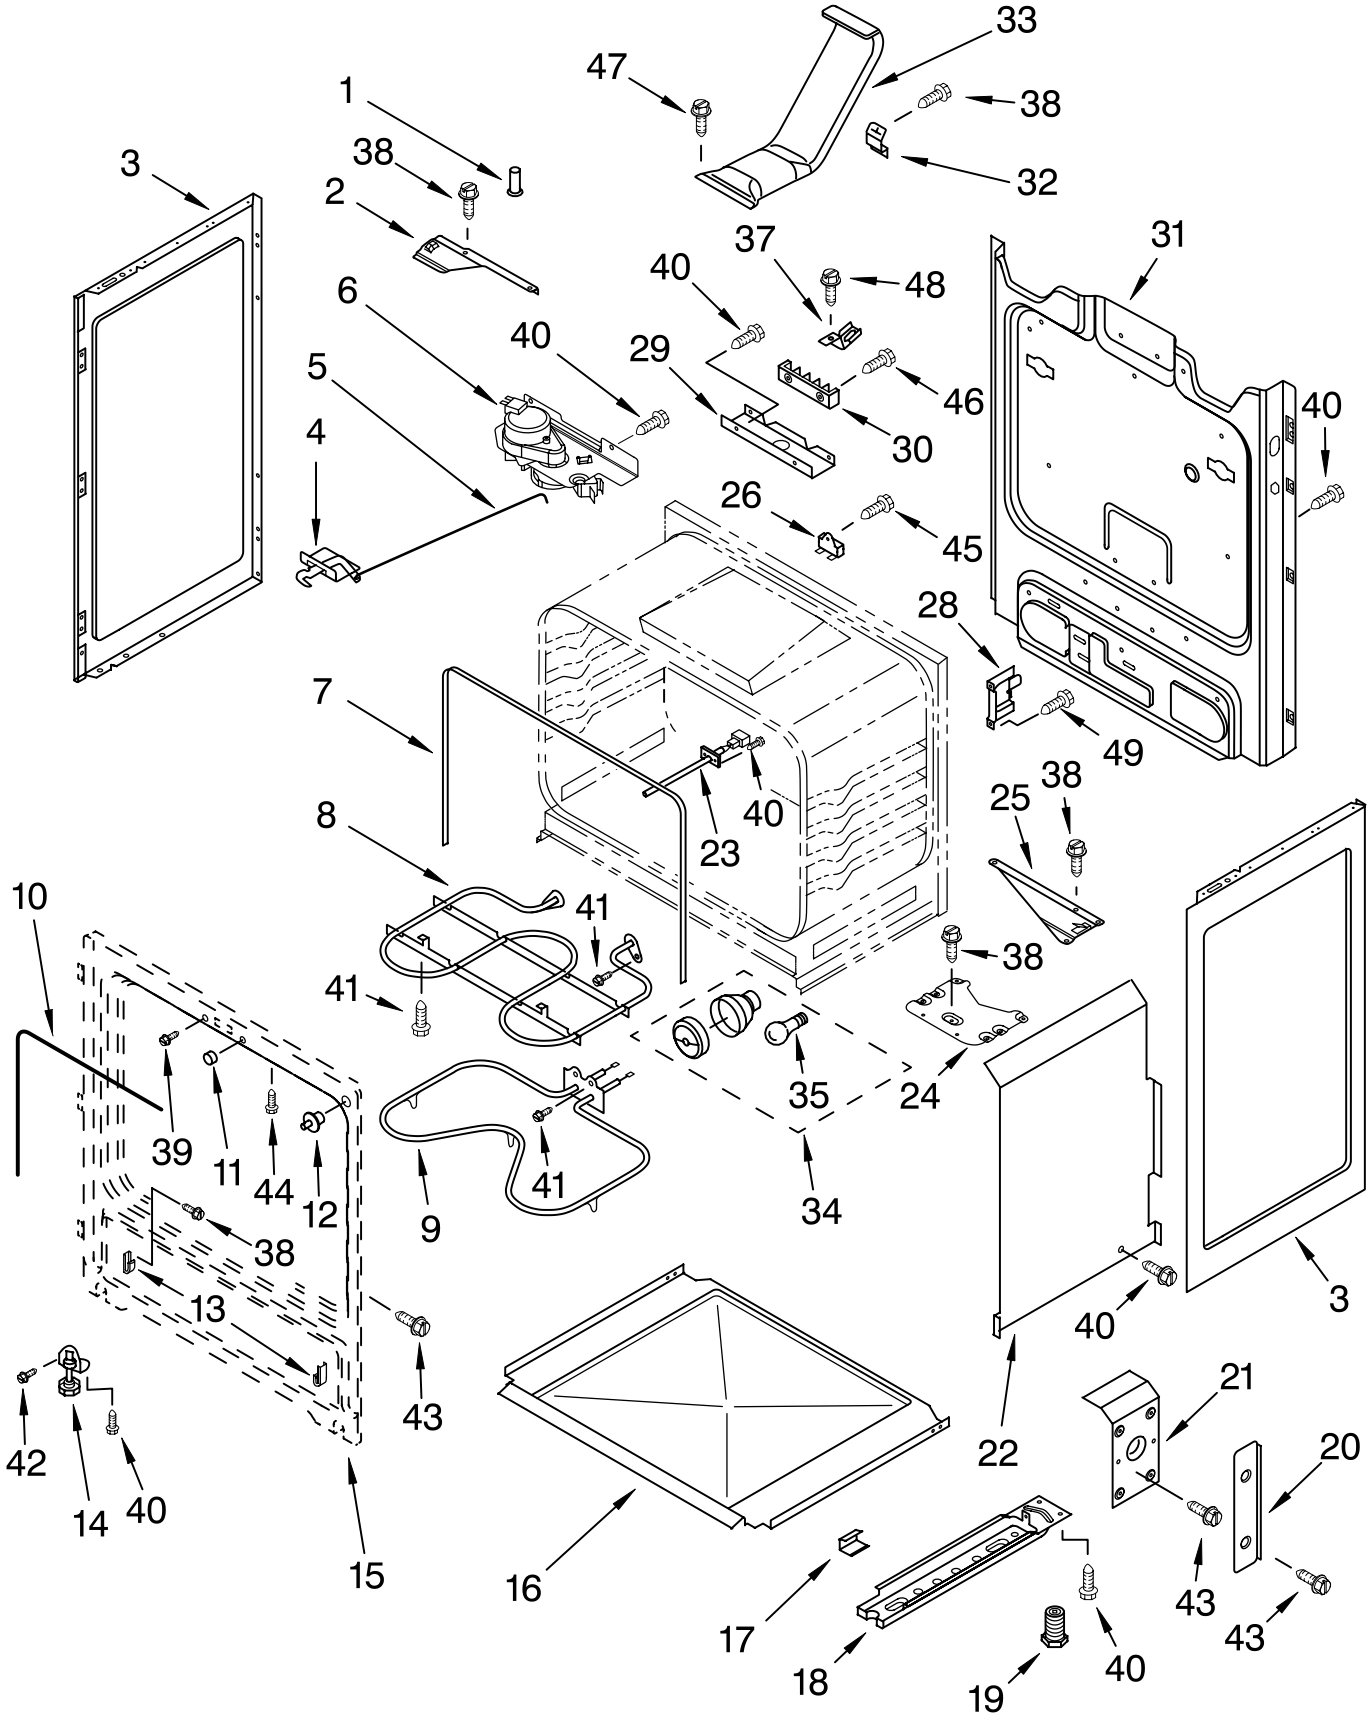

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF386PXGW4, RF386PXGN4, RF386PXGQ4, RF386PXGZ4, RF386PXGB4, RF386PXGT4
(White) (Almond) (Designer White)(Designer Almond)(Black) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	3169110	Tube, Oven Vent
2	3196156	Support, Corner LR
3		Panel, Side (2)
	8053830	White−Textured
	8053831	Almond−Textured
	8053832	Black−Textured
	8272519	Biscuit−Textured
4	3196119	Latch, Door
5	3196961	Rod, Latch
6	3196953	Latch, Rear Ass'y
7	3195737	Seal, Oven Flange
8	8053712	Element, Broil
9	8053713	Element, Bake
10	3195023	Seal, Oven Door
11	3196392	Spacer, Door
12	3196262	Switch, Door
13	3195546	Glide, Drawer (2)
14	3196037	Foot, Front (2)
15		Frame, Front (Non−Serviceable)
16	8054068	Tray, Insulation
17	3196576	Clip, Panel (6)
18	8053335	Rail, Base (2)
19	312701	Foot, Rear (2)
20	3196091	Shield, Outer (2)
21	3196092	Shield, Inner (2)
22	3195717	Retainer, Side (2)
23	8273902	Sensor, Oven
24	3195736	Support, Front (2)
25	3195987	Support, Corner RR
26	3196548	Fuse, Thermal
28	3186116	Support, Oven (2)
29	3186034	Bracket, Service
30	4449868	Block, Terminal
	112432	Nut (3)
31	8272922	Back, Main
32	3196437	Bracket, Flue
33	8273561	Flue
34	3196701	Light Socket Assy
35	311255	Bulb, Oven Light
37	3169573	Ground Strap
38	3196165	Screw
39	3196168	Screw
40	3196178	Screw
41	3196174	Screw
42	3196179	Screw
43	3196177	Screw
44	3196176	Screw
45	3196172	Screw
46	3400016	Screw
47	3196566	Screw
48	3196173	Screw, Ground
49	3196169	Screw

INSULATION

	8272616	Insulation, Wrap
	8272612	Insulation, Back
	8272613	Insulation, Vent

DOOR PARTS

For Models: RF386PXGW4, RF386PXGN4, RF386PXGQ4, RF386PXGZ4, RF386PXGB4, RF386PXGT4
(White) (Almond) (Designer White)(Designer Almond)(Black) (Biscuit)

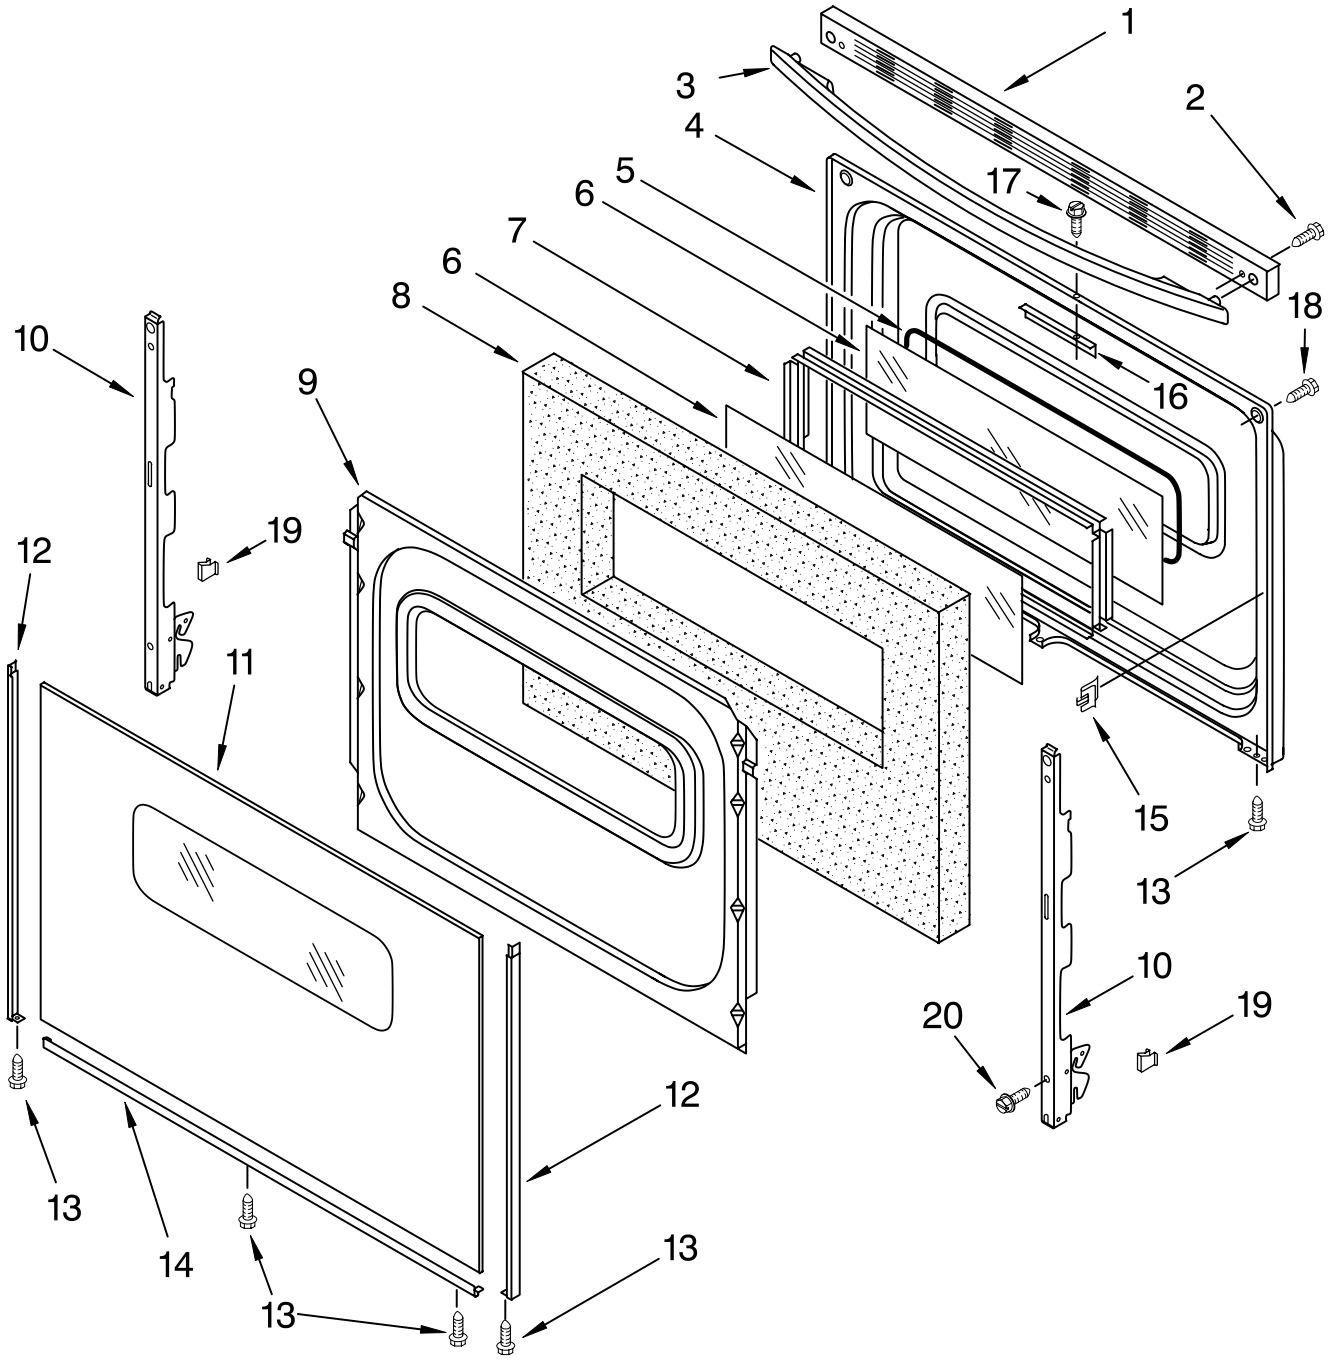

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF386PXGW4, RF386PXGN4, RF386PXGQ4, RF386PXGZ4, RF386PXGB4, RF386PXGT4
(White) (Almond) (Designer White)(Designer Almond)(Black) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		Trim, Door Top
	3196821	White
	3196820	Almond
	3196819	Black
	8272494	Biscuit
2	3196164	Screw
3		Handle, Door
	3195218	White
	3195921	Almond
	3195922	Black
	8272495	Biscuit
4	3186296	Liner, Door
5	8522415	Seal, Window
6	3186282	Glass, Inner (2)
7	3186290	Frame, Glass
8	8272618	Insulation, Door
9	3186299	Retainer, Insul.
10	8053807	Hinge, Door (2)
11		Glass, Outer Door
	8053481	White
	8053483	Almond
	8053479	Black
	8273525	Biscuit
12		Trim, Side
	3195974	White Left Hand
	3195971	White Right Hand
	3195975	Almond Left Hand
	3195972	Almond Right Hand
	3195976	Black Left Hand
	3195973	Black Right Hand
	8272497	Biscuit Left Hand
	8272496	Biscuit Right Hand
13	3196160	Screw
14		Trim, Lower
	3195422	White
	3195423	Almond
	3195424	Black
	8272499	Biscuit
15	3196025	Clip, Glass (6)
16	3195914	Bracket, Latch
17	3196168	Screw
18	3196161	Screw
19	3196925	Clip, Door Stop
20	3196165	Screw

DRAWER & BROILER PARTS

For Models: RF386PXGW4, RF386PXGN4, RF386PXGQ4, RF386PXGZ4, RF386PXGB4, RF386PXGT4
(White) (Almond) (Designer White)(Designer Almond)(Black) (Biscuit)

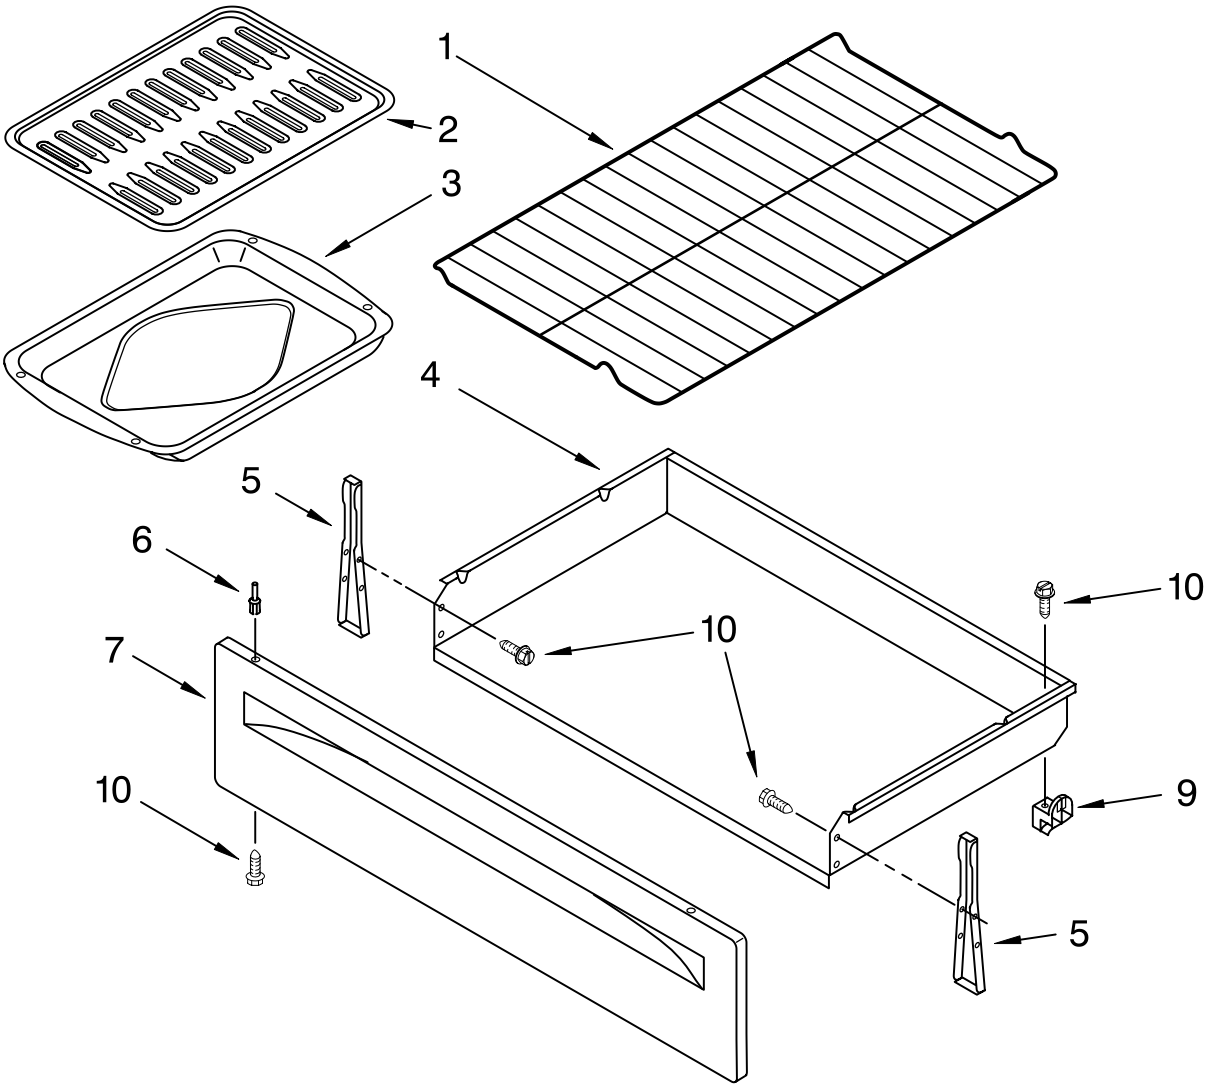

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	3195996	Grill, Broiler
3	3196076	Pan, Broiler
4	8272605	Drawer, Storage
5	3196816	Bracket, Drawer(2)
6		Rivet, Push (2)
	3196814	White
	3196815	Almond
	3196813	Black
7		Panel, Drawer Frnt
	8053339	White
	8053340	Almond
	8053341	Black
	8272501	Biscuit
9	8053334	Glide, Drawer (2)
10	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: RF386PXGW4, RF386PXGN4, RF386PXGQ4, RF386PXGZ4, RF386PXGB4, RF386PXGT4
(White) (Almond) (Designer White)(Designer Almond)(Black) (Biscuit)

Illus. No.	Part No.	DESCRIPTION

Following Parts Not Illustrated

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150°c
242820	Wire, Black 14 Ga. 150°c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242829	Wire, Red 12 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242826	Wire, White 14 Ga. 150°c
242827	Wire, Yellow 14 Ga. 150°c
242832	Wire, Yellow 14 Ga. 200°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
240132	Insulation, Fiberglass (2−1/2"
313660	Clip, Ground Wire x 22" x 120")

PAINT, TOUCH−UP (1/2oz.)

72017	White
72107	Almond
4392899	Biscuit
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
4392900	Biscuit (Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3191048	Cleaner, Glass

ANTI−TIP KIT

3176830	Anti−Tip Kit

WIRING HARNESS PARTS

8272999	Harness, Cooktop
3196520	Clip, Wire Harness
8273328	Harness, Oven
3196696	Clip, Wire Harness
8273266	Harness, Wire (Door Switch)
311227	Wire, Ground
313660	Clip, Ground Wire
3196173	Screw
3196154	Screw, Ground

Miscellaneous

814381	Pin Kit−Dr Removal